

Installation Instructions

Surface Fixed


Rainbow Sambas
Page 1 of 2



Instrument
Components:

Rainbow
Sambas
are pre-
assembled

Metric Conversion:
80mm/ 3"
100mm/ 4"
230mm/ 9"
300mm/ 12"
400mm/ 16"
450mm/ 18"
1.5m/ 59"

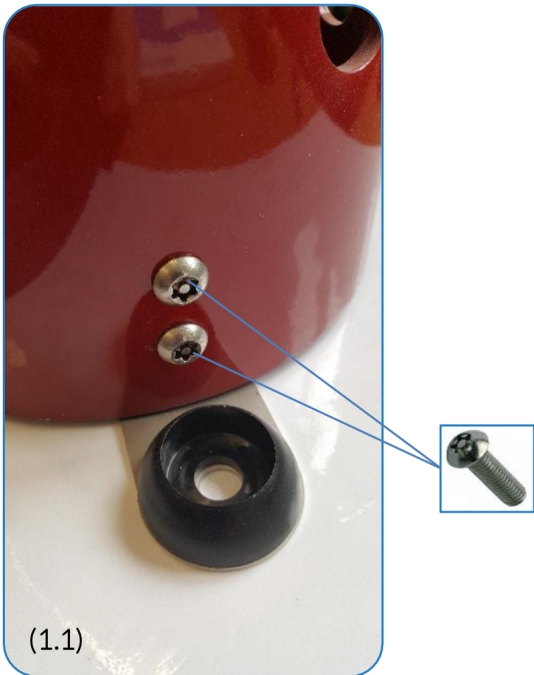

(1.1)


Weight of heaviest part 14.6kg (XL Samba)

1. Assemble fixing brackets to base of sambas using M8x25mm security screws and nyloc nuts. (1.1) (See Assembly Guide)

2. Arrange Sambas in desired location and mark holes to fix to desired surface.


3. Fix to Surface using recommended ground anchors (Ground Anchors are not supplied)

4. Make sure all fixings are covered and secure using cover caps provided

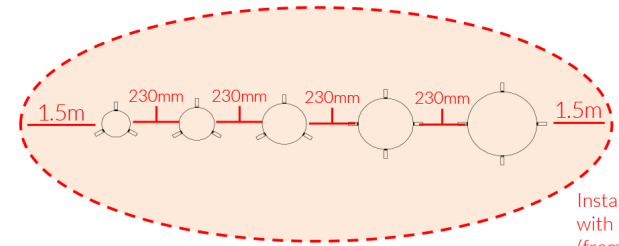

Install Instrument with 1.5m free space (from widest point) around it.

Sambas will arrive on site in pre set heights.

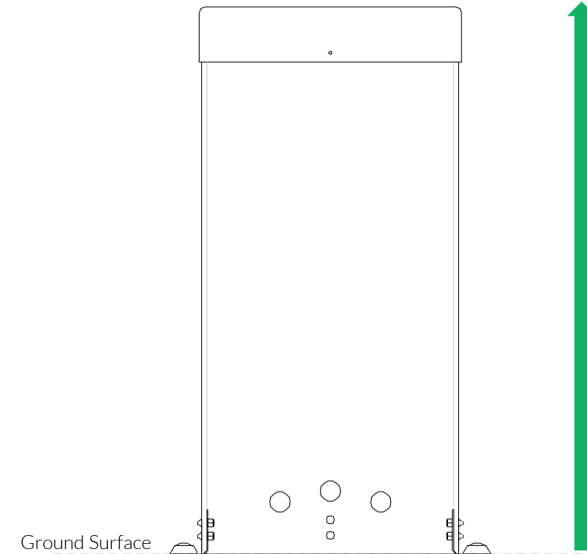

Ground Fix
Components:



Assembly Guide PPRASA

Surface Fixed


Rainbow Sambas
Page 2 of 2







Instrument
Components:

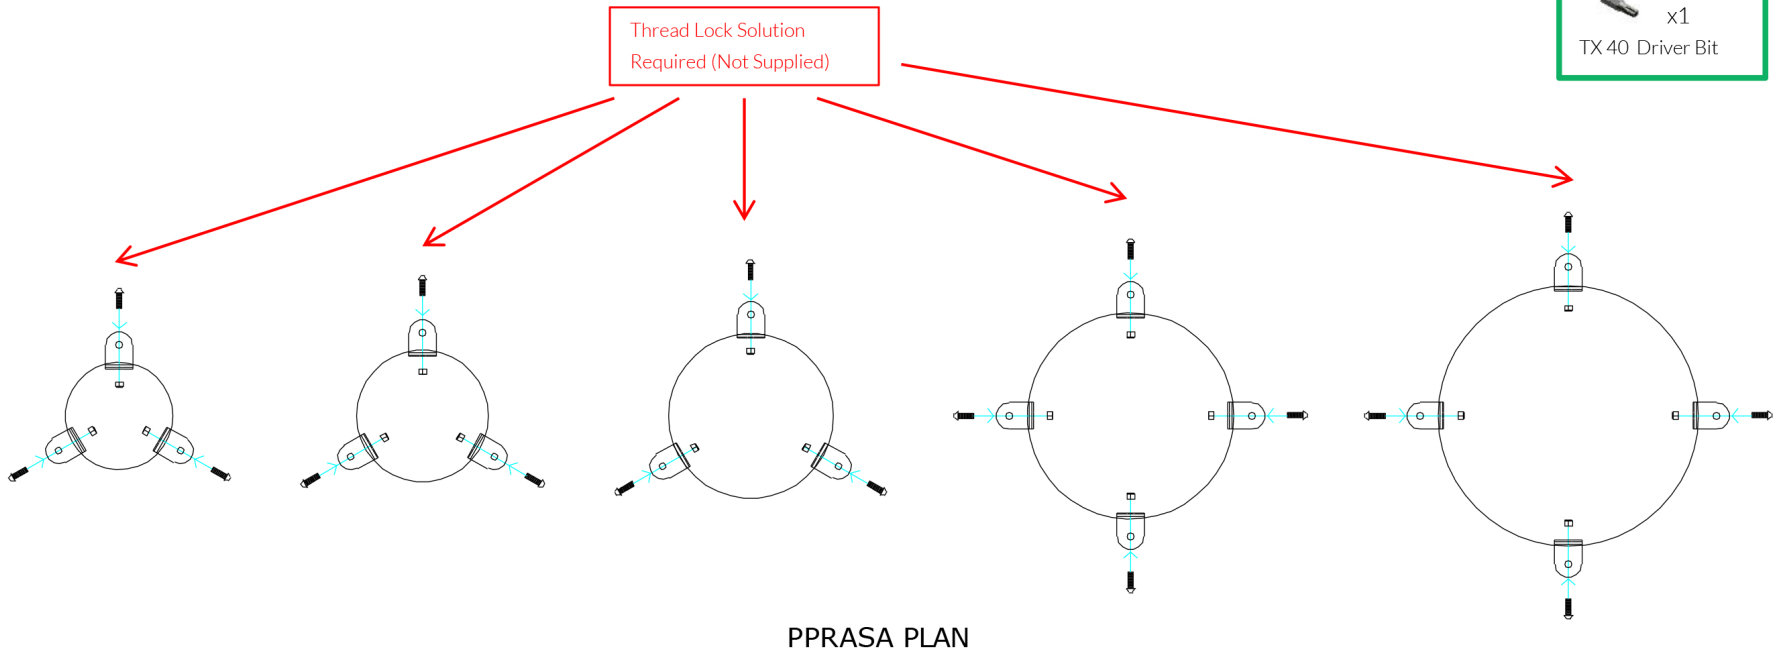Rainbow
Sambas
are pre-
assembled

Thread Lock Solution
Required (Not Supplied)



COMPONENTS LIST:

-  M8x25 Pin torx X34
-  Surface Fix L Bracket X17
-  M12 2 Part black cap X17
-  M8 Nyloc nut X34



Ground Fix
Components:



47 Kg